


Code	No.	Description
	730960150	HOTPLATE CLAMP
9L	730960010	Hotplate Assembly (Complete)
1E	730960090	Hob Filling
3E	730960120	Top Drip Trays
1F	730961190	Front Hob Rail
7F	730961200	Rear Hob Rail
8B	730962150	Door Catch
6B	730962160	Door Catch Keeper
2B	730962170	Door Handle c/w Gaskets
7D	730962183	Door Seal Set
5C	730962190	Hinge — Top Left Hand
5C	730962200	Hinge — Top Right Hand
5C	730962210	Hinge — Bottom Left Hand
5C	730962220	Hinge — Bottom Right Hand
3E	730962230	Oven Drip Tray
2D	730962250	Oven Bottom Plate
5G	730963012	Outer Side — Left Hand; s/s
5G	730963022	Outer Side — Right Hand; s/s
1F	730963031	Outer Side — Left Hand; Black

Code	No.	Description
1F	730963041	Outer Side — Right Hand; Black
9B	730963050	Leg c/w Adjustable Foot
12K	730963062	Door Assembly — Left Hand
12K	730963072	Door Assembly — Right Hand
5D	730963082	Control Panel
10C	730963121	Side Drip Shed
12C	730963160	Cheek — Left hand
12C	730963170	Cheek — Left Hand
1E	730963180	Oven Grid Shelf
10C	730963190	Oven Shelf Hanger
6A	730963200	Oven Hanger Bracket

Sheet Reference Number

E1100/1182/001

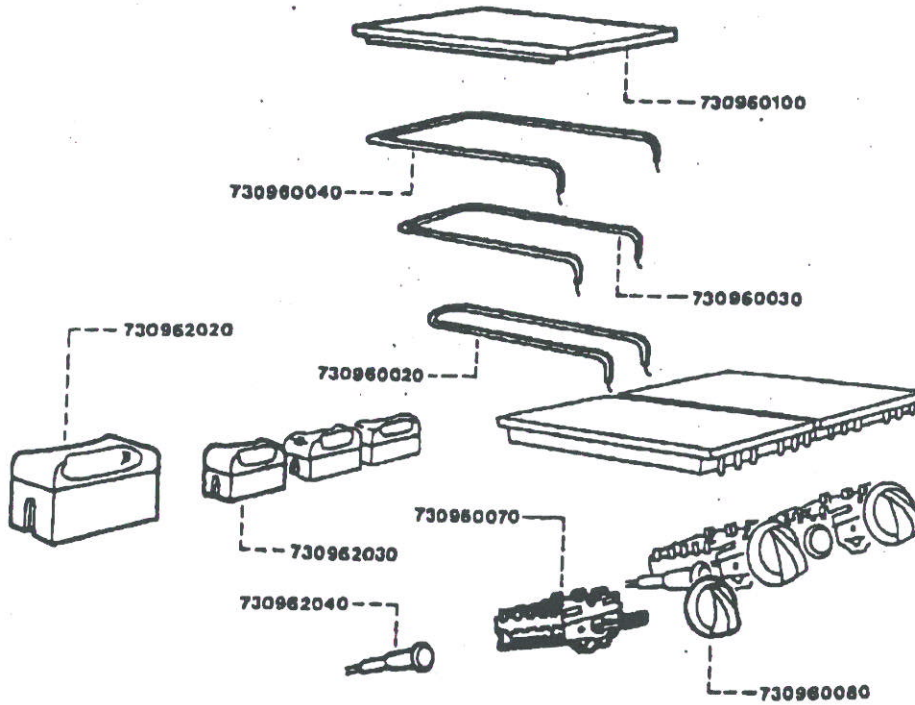


Code	No.	Description
6E	730960020	Inner Hotplate Element
8E	730960030	Intermediate Hotplate Element
10E	730960040	Outer Hotplate Element
8C	730960070	Control Switch
1B	730960080	Control Knob
7F	730960100	Hotplate (Casting only)
11C	730962020	30 amp Fuse Assembly
9C	730962030	20 amp Fuse Assembly
7B	730962040	Pilot Lamp (Amber)

730960150 ELEMENT CLAMP PLATE.

Sheet Reference Number


E1100/1182/002

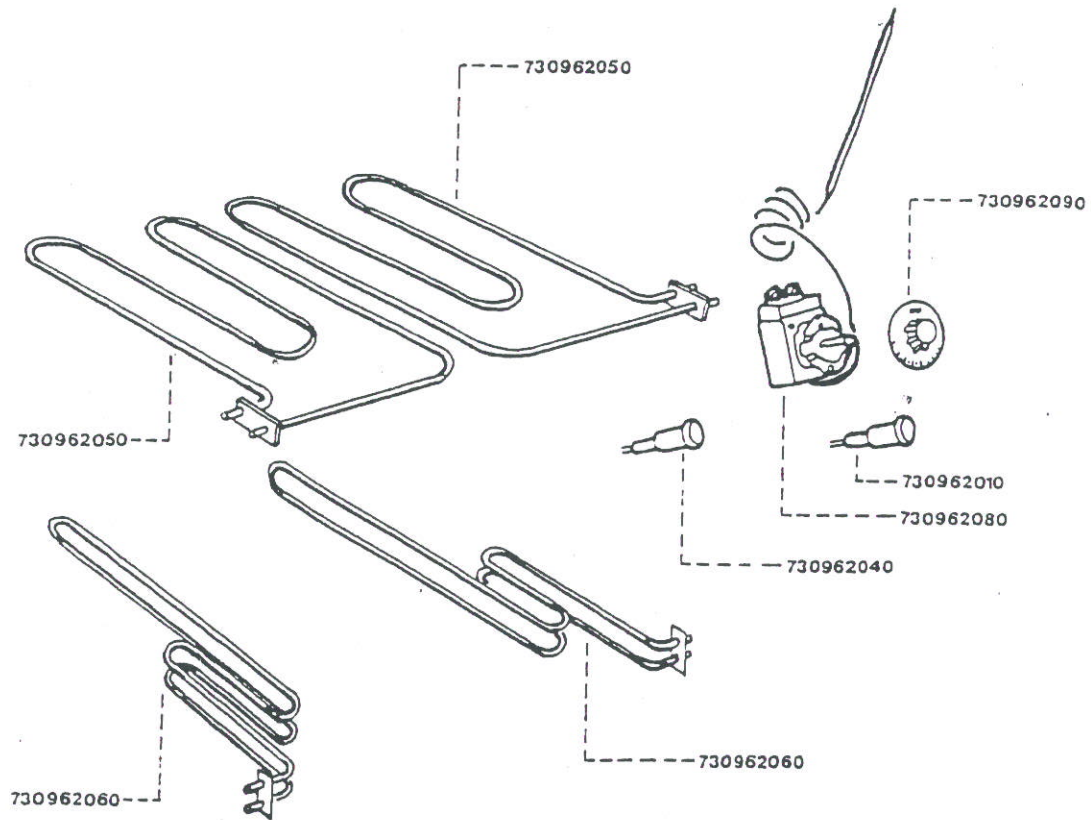

Code	No.	Description
7B	730962010	Mains Pilot Lamp (Red)
7B	730962040	Pilot Lamp (Amber)
3F	730962050	Top Oven Element
6F	730962060	Bottom Oven Element
1F	730962080	Thermostat
6B	730962090	Thermostat Knob

Sheet Reference Number


E1100/1182/008

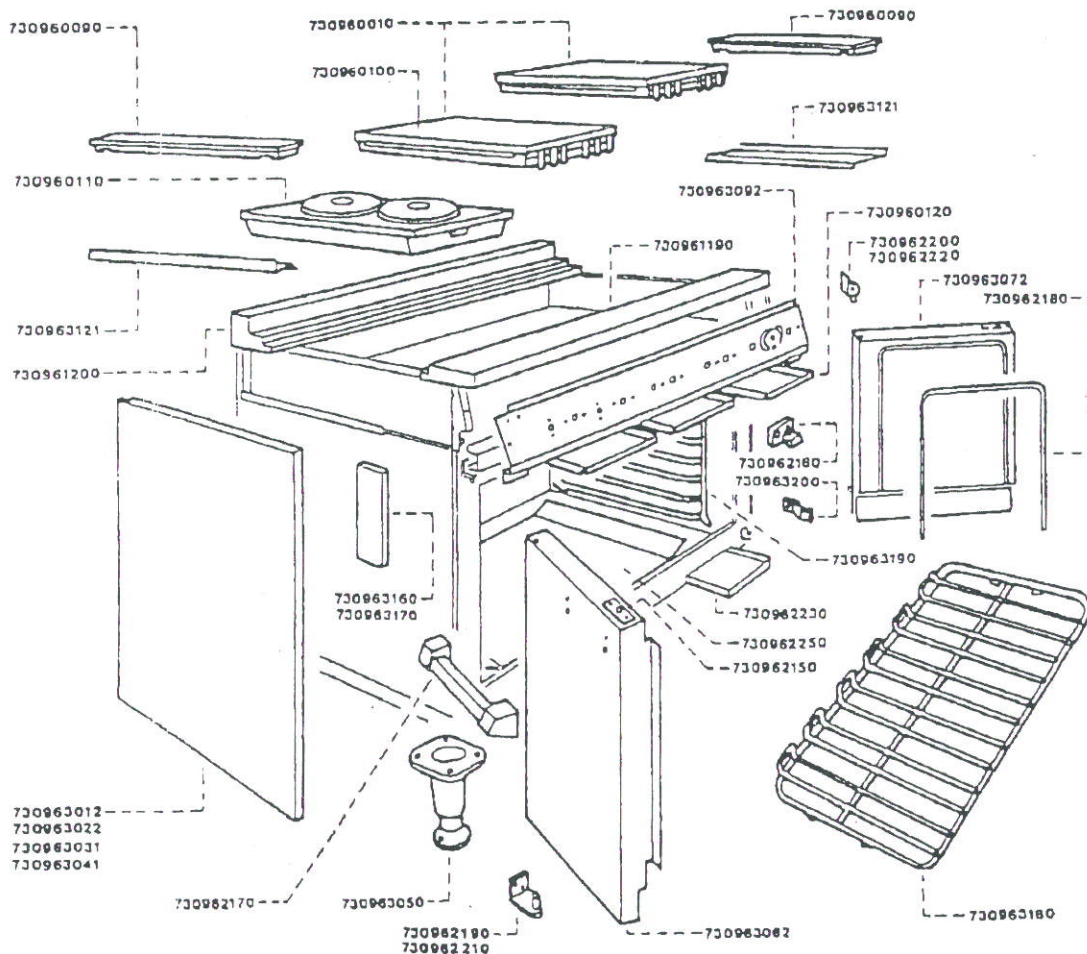

Code	No.	Description	Code	No.	Description
9L	730960010	Rect. Hotplate Complete	1F	730963031	Outer Side--Left Hand; Black
1E	730960090	Hob Filling	1F	730963041	Outer Side--Right Hand; Black
7F	730960100	Hotplate Casting Only	9B	730963050	Leg c/w Adjustable Foot
6F	730960110	Round Hotplate Assembly	12K	730963062	Door Assembly--Left Hand
3E	730960120	Top Drip Trays	12K	730963072	Door Assembly--Right Hand
1F	730961190	Front Hob Rail	5D	730963092	Control Panel
7F	730961200	Rear Hob Rail	10C	730963121	Side Drip Shed
8B	730962150	Door Catch	12C	730963160	Cheek--Left Hand
6B	730962160	Door Catch Keeper	12C	730963170	Cheek--Right Hand
2B	730962170	Door Handle c/w Gaskets	1E	730963180	Oven Grid Shelf
7D	730962183	Door Seal Set	10C	730963190	Oven Shelf Hanger
5C	730962190	Hinge -- Top Left Hand	6A	730963200	Oven Hanger Bracket
5C	730962200	Hinge -- Top Right Hand			
5C	730962210	Hinge -- Bottom Left Hand			
5C	730962220	Hinge -- Bottom Right Hand			
3E	730962230	Oven Drip Tray			
2D	730962250	Oven Bottom Plate			
5G	730963012	Outer Side -- Left Hand; s/s			
	730963022	Outer Side -- Right Hand; s/s			

Sheet Reference Number

E1100/1182/003

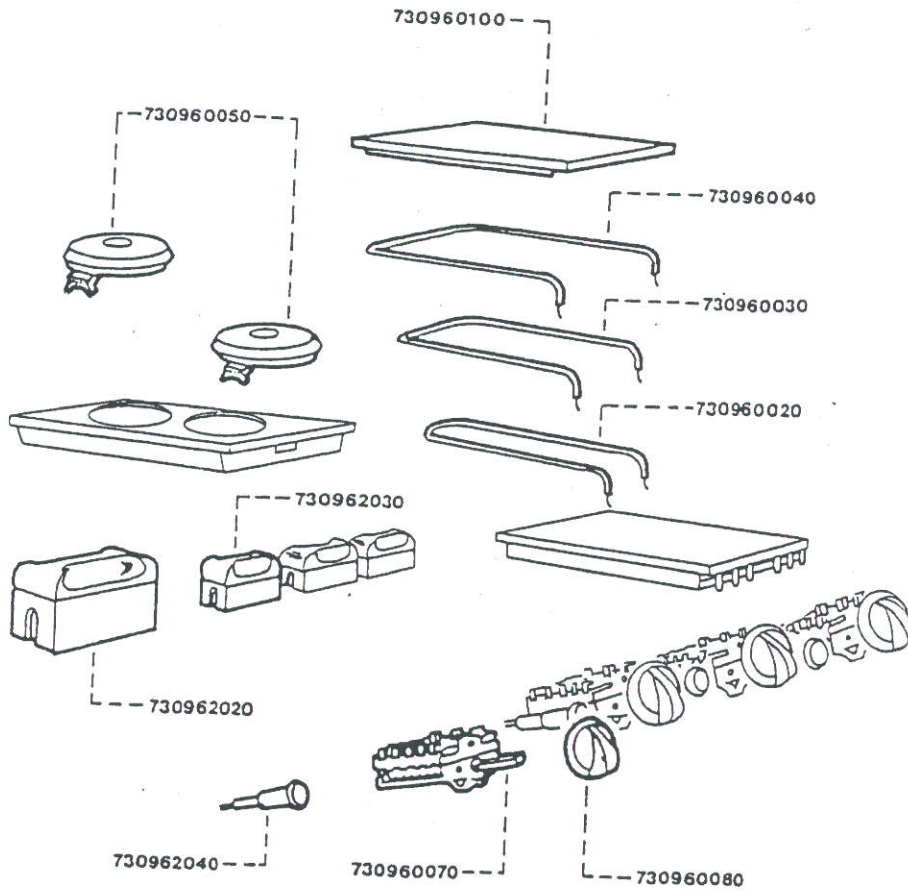


Code	No.	Description
6E	730960020	Inner Hotplate Element
8E	730960030	Intermediate Hotplate Element
10E	730960040	Outer Hotplate Element
5E	730960050	Round Hotplate
8C	730960070	Control Switch
1B	730960080	Control Knob
7F	730960100	Hotplate (Casting only)
11C	730962020	30 amp Fuse Assembly
9C	730962030	20 amp Fuse Assembly
7B	730962040	Pilot Lamp (Amber)

730962010 MAIN PILOT LAMP RED.  
730960114 ROUND HOTPLATE ASSY COMPLETE.

Sheet Reference Number

E1100/1182/004



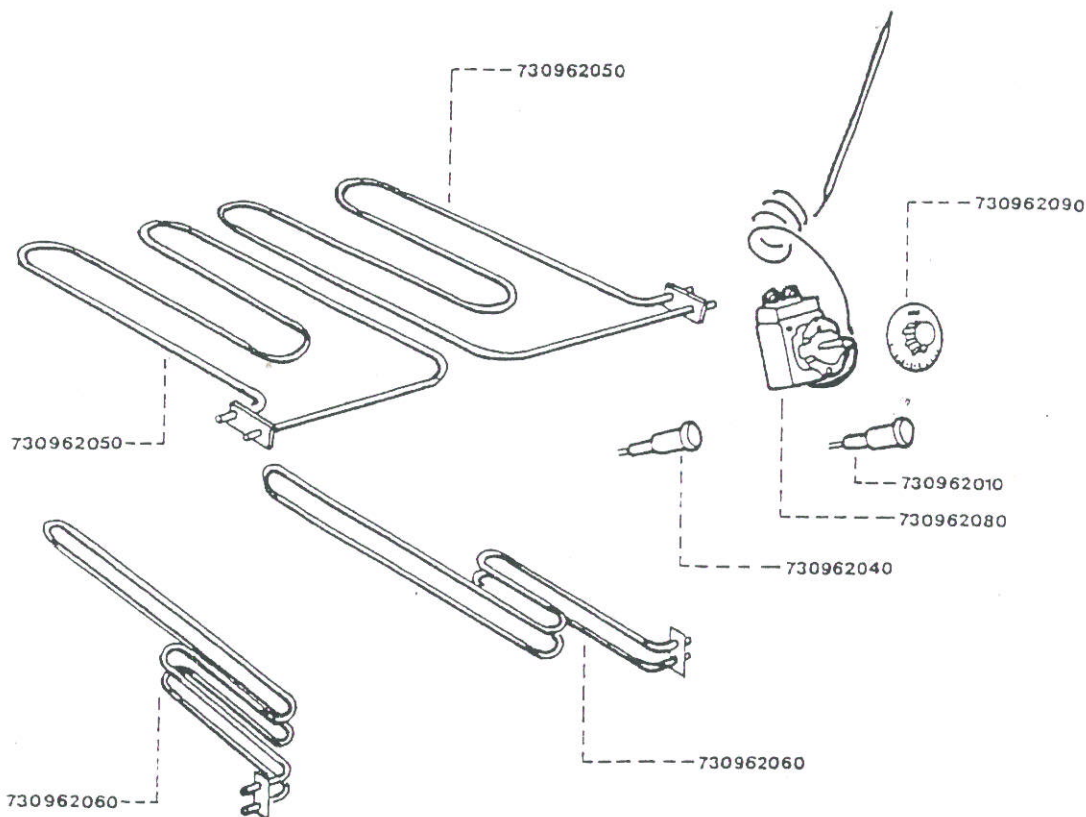

<u>Code</u>	<u>No.</u>	<u>Description</u>
7B	730962010	Mains Pilot Lamp (Red)
7B	730962040	Pilot Lamp (Amber)
3F	730962050	Top Oven Element
6F	730962060	Bottom Oven Element
1F	730962080	Thermostat
6B	730962090	Thermostat Knob

Sheet Reference Number

E1100/1182/008

