



E915 SALAMANDER

SERVICE  
MANUAL





**WARNING: ALL INSTALLATION AND SERVICE REPAIR WORK MUST BE CARRIED OUT BY QUALIFIED PERSONS ONLY.**

---

# CONTENTS

This manual is designed to take a more in depth look at the E915 salamanders for the purpose of making the units more understandable to service people.

There are settings explained in this manual that should never require to be adjusted, but for completeness and those special cases where these settings are required to change, this manual gives a full explanation as to how, and what effects will result.

SECTION	PAGE NO.
1. SPECIFICATIONS .....	5
2. INSTALLATION & OPERATION .....	7
2.1 Installation	
2.2 Operation	
2.3 Cleaning	
3. TROUBLE SHOOTING GUIDE.....	8
4. SERVICE PROCEDURES .....	9
4.1 Access	
4.2 Replacement	
5. ELECTRICAL WIRING DIAGRAMS.....	10
6. SPARE PARTS .....	11
7. SERVICE CONTACTS.....	12
APPENDIX A. MOUNTING HOLE LOCATIONS.....	13






**IMPORTANT: MAKING ALTERATIONS MAY VOID WARRANTIES AND APPROVALS.**



# 1. SPECIFICATIONS

## MODEL: E915

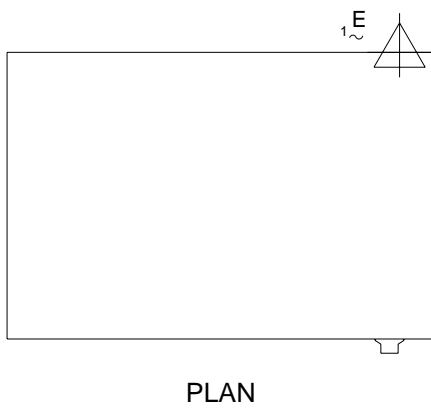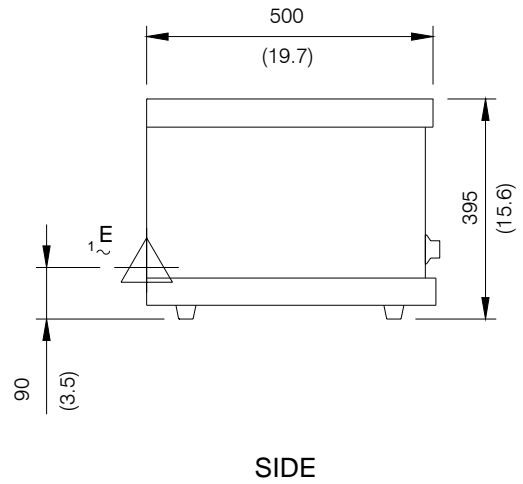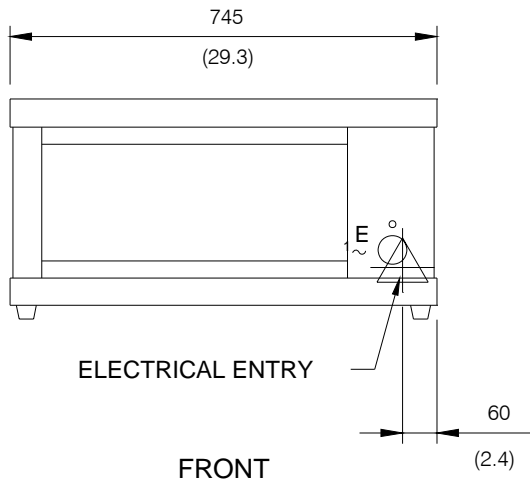

### LEGEND



- Electrical connection entry point

Dimensions shown in millimetres.  
Dimensions in inches shown in brackets.

---

### **SALAMANDER INTERNAL DIMENSIONS**

Width            530 mm / 20 <sup>7</sup>/<sub>8</sub>"  
Depth            410 mm / 16 <sup>1</sup>/<sub>8</sub>"  
Height           230 mm / 9"

### **SALAMANDER RACK SIZE**

Width            475 mm / 18 <sup>3</sup>/<sub>4</sub>"  
Depth            375 mm / 14 <sup>3</sup>/<sub>4</sub>"

### **ELECTRICAL SUPPLY SPECIFICATION**

220-240 Volts A.C, 50/60 Hz, 15 Amp, 3.6 kW

### **ELECTRICAL PLUG SPECIFICATION REQUIREMENTS**

Australia        3-pin 250V 15A, AS/NZ 3112  
New Zealand    3-pin 250V 15A, AS/NZ 3112  
Other Countries 3-pin 250V 15A minimum, type  
                         to meet country standards

## 2. INSTALLATION & OPERATION

**⚠ WARNING: THIS APPLIANCE MUST BE GROUNDED.**

**⚠ WARNING: ALL INSTALLATION AND SERVICE REPAIR WORK MUST BE CARRIED OUT BY QUALIFIED PERSONS ONLY.**

### 2.1 INSTALLATION

It is most important that the salamander is installed correctly and that the operation is correct before use. Installation shall comply with local electrical, health and safety requirements.

#### BEFORE CONNECTION TO POWER SUPPLY

Unpack and check unit for damage and report any damage to the carrier and dealer. Report any deficiencies to your dealer. Check that the available power supply is correct to that shown on the rating plate located on the base panel.

220-240 Volts A.C, 15.0 Amp, 3.6kW

#### ELECTRICAL CONNECTION

All units are fitted with a 15 amp 3 wire power flex for electrical supply connection plug wiring as required (refer specifications page 6).

Australian units are fitted with a 15 amp 3 pin plug cordset for direct pug in connection.

#### LOCATION

This unit can be mounted on a bench or table—adjust feet as required. If wall mounting, attach bracket to wall securely. Hang unit from bracket and adjust rear spacers for correct level.

#### RATING PLATE LOCATION

##### Units manufactured from July 2002.

The rating plate for the E915 salamander is located on the RH side above the slots at the front.



Figure 2.1

##### Units manufactured up to July 2002.

The rating plate for the E915 salamanders is located on the rear of the unit.

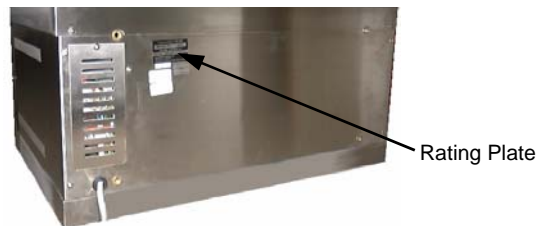


Figure 2.2

### 2.2 OPERATION

**NOTE:** A full user's operation manual is supplied with the product and can be used for further referencing of installation, operation and service.

#### OPERATION

This unit is designed to grill and top brown food. The three elements above the cooking rack are controlled by an ON/OFF switch. A pilot light indicates when the elements are heating. Position the rack at the desired height. When grilling meats ensure the spillage tray is in position on the base under the rack.

### 2.3 CLEANING

**⚠ WARNING: ALWAYS TURN THE POWER SUPPLY OFF BEFORE CLEANING.**

**⚠ IMPORTANT: THIS UNIT IS NOT WATER PROOF. DO NOT USE A WATER JET SPRAY TO CLEAN INTERIOR OR EXTERIOR OF THIS UNIT.**

Clean with a damp cloth and detergent. Remove spillage tray and rack for cleaning.

### 3. TROUBLE SHOOTING



**WARNING: ALL INSTALLATION AND SERVICE REPAIR WORK MUST BE CARRIED OUT BY QUALIFIED PERSONS ONLY.**

FAULT	POSSIBLE CAUSE	REMEDY
THE UNIT DOES NOT OPERATE	The mains isolating switch on the wall, circuit breaker or fuses are "off" at the power board.  Incorrect electrical supply.  On/Off switch on unit faulty.	Turn on.  Ensure electrical supply correct.  Replace. <b>(Refer service section 4.2.2)</b>
ONE ELEMENT DOES NOT WORK	Element faulty (blown).	Replace. <b>(Refer service section 4.2.3)</b>
INDICATOR LIGHT DOES NOT ILLUMINATE	Indicator faulty.  On/Off switch on unit faulty.	Replace. <b>(Refer service section 4.2.1)</b>  Replace. <b>(Refer service section 4.2.2)</b>



## 4. SERVICE PROCEDURES

**⚠ WARNING: ENSURE POWER SUPPLY IS SWITCHED OFF BEFORE SERVICING.**

**⚠ WARNING: ALL INSTALLATION AND SERVICE REPAIR WORK MUST BE CARRIED OUT BY QUALIFIED PERSONS ONLY.**

### 4.1 ACCESS

#### 4.1.1 TOP COVER

- 1) Remove the two screws under the front edge.

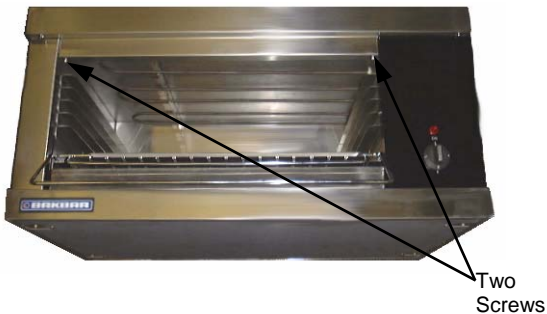


Figure 4.1.1

- 2) Remove two screws from the rear side faces of the cover.
- 3) Lift cover at rear and slide forward to disengage at front.

### 4.2 REPLACEMENT

#### 4.2.1 INDICATOR LIGHT

- 1) Remove top cover (refer 4.1.1).
- 2) Remove wires from back of indicator.
- 3) Push indicator through control panel from behind.
- 4) Replace and reassemble in reverse order.

#### 4.2.2 ON/OFF SWITCH

- 1) Remove top cover (refer 4.1.1).
- 2) Remove switch knob, and undo two screws securing switch to control panel.



Figure 4.2.1

- 3) Remove wires from the switch, noting their positions.
- 4) Withdraw the switch, replace, and re-assemble in reverse order.

#### 4.2.3 ELEMENTS

- 1) Remove top cover (refer 4.1.1).
- 2) Remove wires from the element, noting their positions.
- 3) Undo the two nuts securing the element to the unit.
- 4) Remove the element, replace, and re-assemble in reverse order.


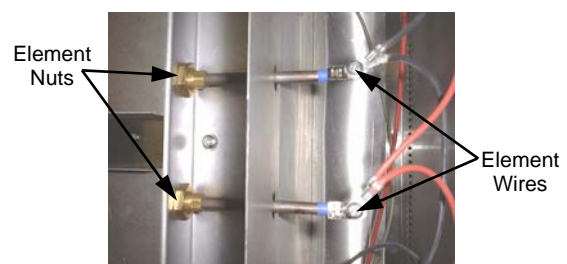


Figure 4.2.2

# 5. ELECTRICAL WIRING DIAGRAM

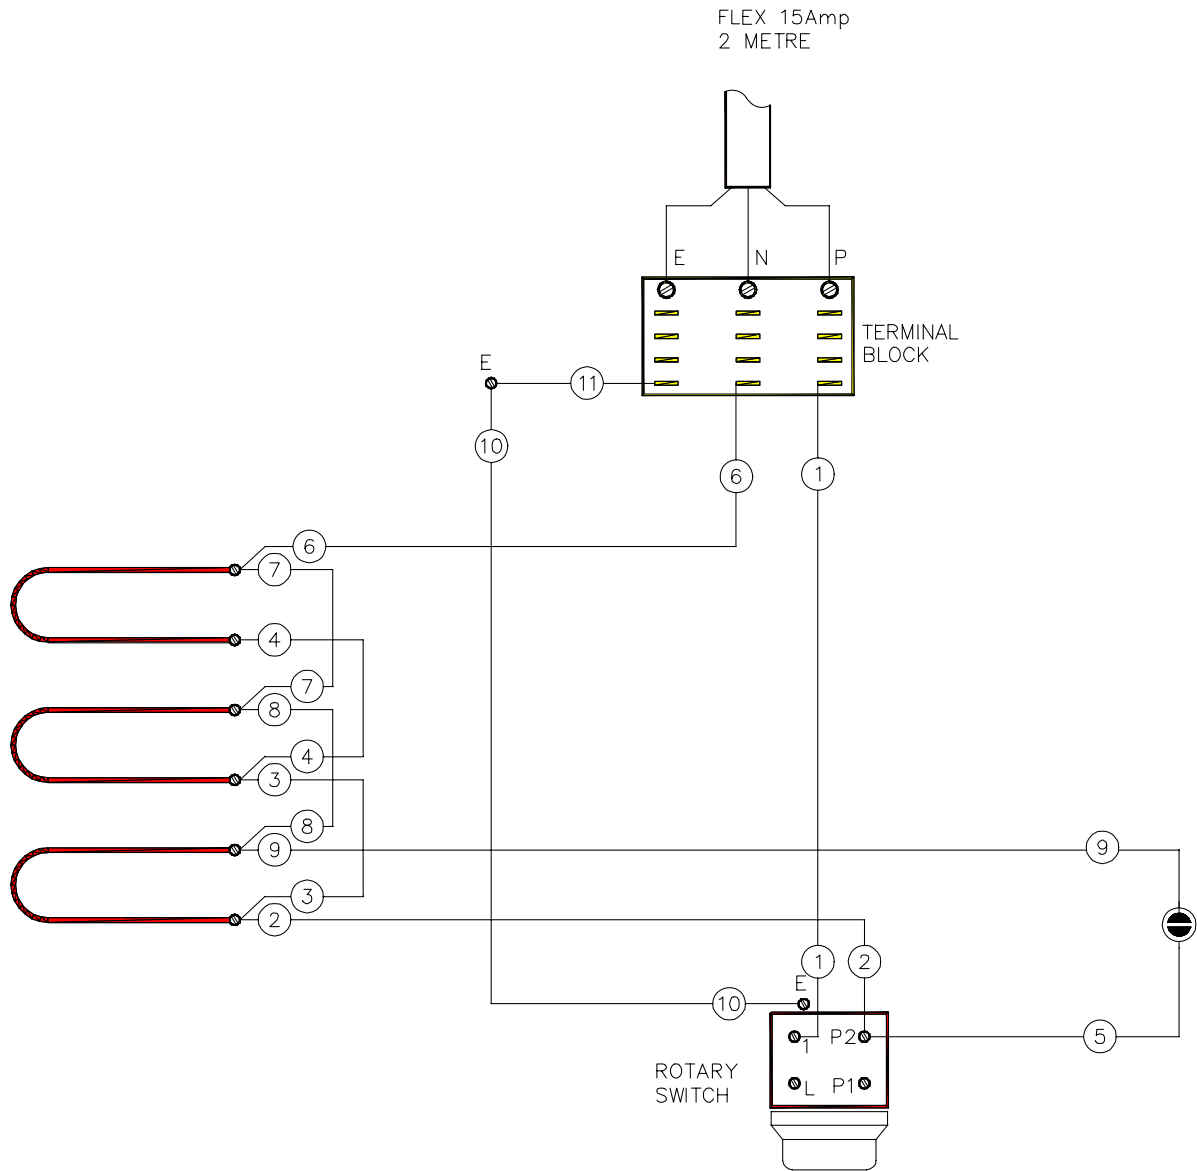

---

## 6. SPARE PARTS

<b>PART NO</b>	<b>DESCRIPTION</b>
013586	Terminal Block
011331	Element 220 - 240V
013755	On / Off Switch
013756	Knob
013528	Pilot Light
017826	Salamander Rack
017939	Grease Tray
017940	Grease Deflector

## 7. SERVICE CONTACTS

### AUSTRALIA

VICTORIA - MOFFAT PTY  
HEAD OFFICE AND MAIN WAREHOUSE  
740 Springvale Road  
Mulgrave VIC 3170  
Spare Parts Department

Tel (03) 9518 3888  
Fax (03) 9518 3838  
Free Call 1800 337 963  
Fax (03) 9518 3895

NEW SOUTH WALES - MOFFAT PTY  
Unit 8/142 James Ruse Drive  
Rosehill NSW 2142  
Spare Parts

Tel (02) 8833 4111  
Free Call 1800 337 963  
Fax (03) 9518 3895

QUEENSLAND - MOFFAT PTY  
30 Prosperity Place  
Geebung QLD 4034  
Spare Parts

Tel (07) 3630 8600  
Free Call 1800 337 963  
Fax (03) 9518 3895

SOUTH AUSTRALIA - MOFFAT PTY  
28 Greenhill Rd  
Wayville SA 5034  
Spare Parts

Tel (08) 8274 2116  
Free Call 1800 337 963  
Fax (03) 9518 3895

WESTERN AUSTRALIA - MOFFAT PTY  
PO Box 689  
Joondalup Business Centre WA 6027  
Spare Parts

Tel (08) 9305 8855  
Free Call 1800 337 963  
Fax (03) 9518 3895

**NATIONAL COVERAGE FOR 24 HOUR SERVICE OR MAINTENANCE DIAL  
FREE CALL 1800 622 216 (AUSTRALIA ONLY)**

### CANADA

Lessard Agencies Limited  
PO Box 97  
Stn "D"  
Toronto, ONT M6P 3J5

Tel (416) 766 2764  
Fax (416) 760 0394  
Free Call 1 888 537 7273

### NEW ZEALAND

CHRISTCHURCH - MOFFAT LTD  
16 Osborne St  
PO Box 10-001  
Christchurch  
Spare Parts

Tel (03) 389 1007  
Fax (03) 389 1276  
Free Call 0800 MOFFAT  
(0800 66 33 28)  
Fax (03) 381 3616

AUCKLAND - MOFFAT LTD  
4 Waipuna Road  
Mt Wellington  
Auckland  
Spare Parts

Tel (09) 574 3150  
Fax (09) 574 3159  
Free Call 0800 MOFFAT  
(0800 66 33 28)

---

## **UNITED KINGDOM**

BLUESEAL LTD  
Units 6-7 Mount St Business Park  
Mount Street, Nechells  
Birmingham B7 5QU  
England

Tel 0121 327 5575  
Fax 0121 327 9711


## **UNITED STATES OF AMERICA**

MOFFAT INC.  
3765 Champion Blvd  
Winston-Salem  
NC27115


Tel 1800 551 8795  
Fax 336 661 9546

**NATIONAL COVERAGE FOR SERVICE OR MAINTENANCE DIAL  
FREE CALL 1800 551 8795 (USA ONLY)**

## APPENDIX A. MOUNTING HOLE LOCATIONS

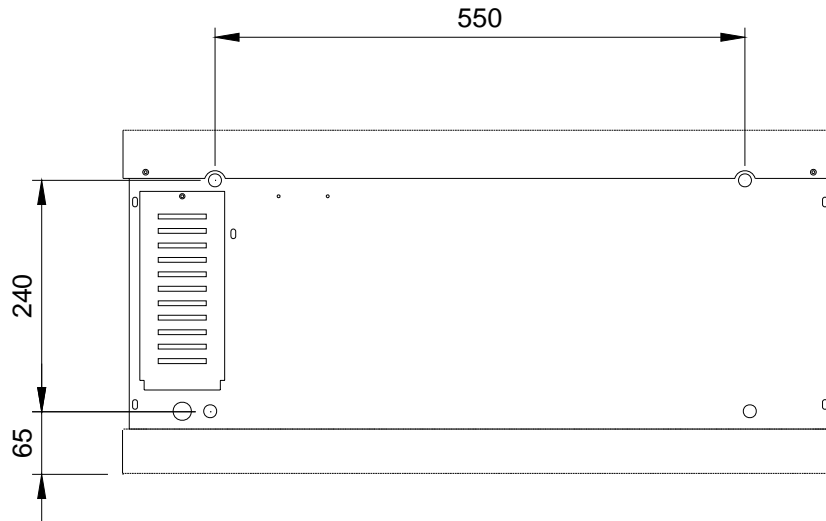

REAR VIEW

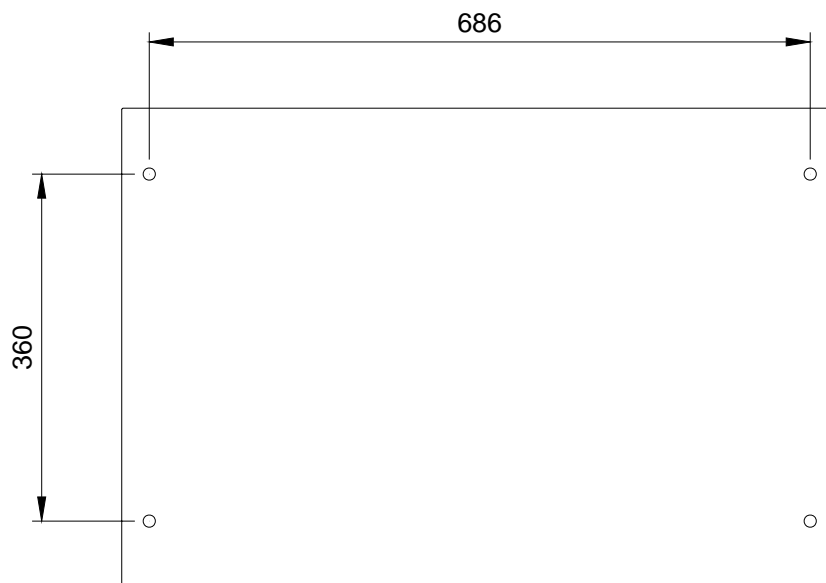

BASE VIEW

Dimensions shown in millimetres.

All mounting holes are threaded  $\frac{3}{8}$ " BSW