

PARTI DI RICAMBIO
PIECES DETACHEES
SPARE PARTS
ERSATZTEILE
LISTA DE RECAMBIOS

LF 321 - 321 A

LF 322 - 322 A


LF 324 - 324 A

LF 325E

LF 325E / A

LF 700 - 700 A

 06/04

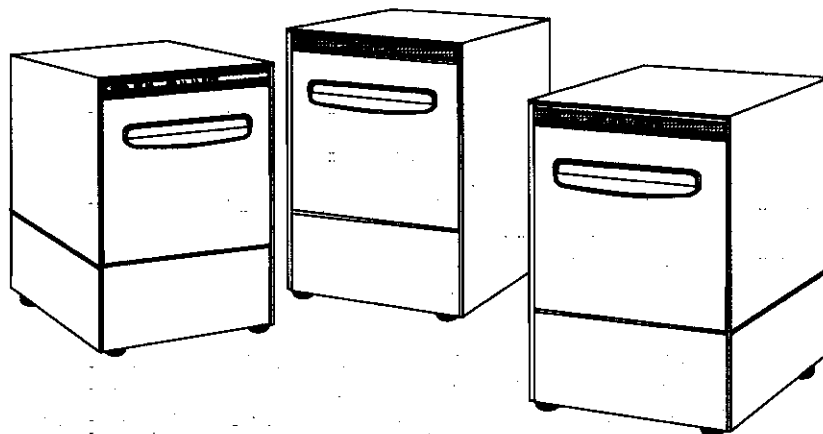


COMENDA

01 - 2005 | S. AG.

LF324

 
Hood/Tank

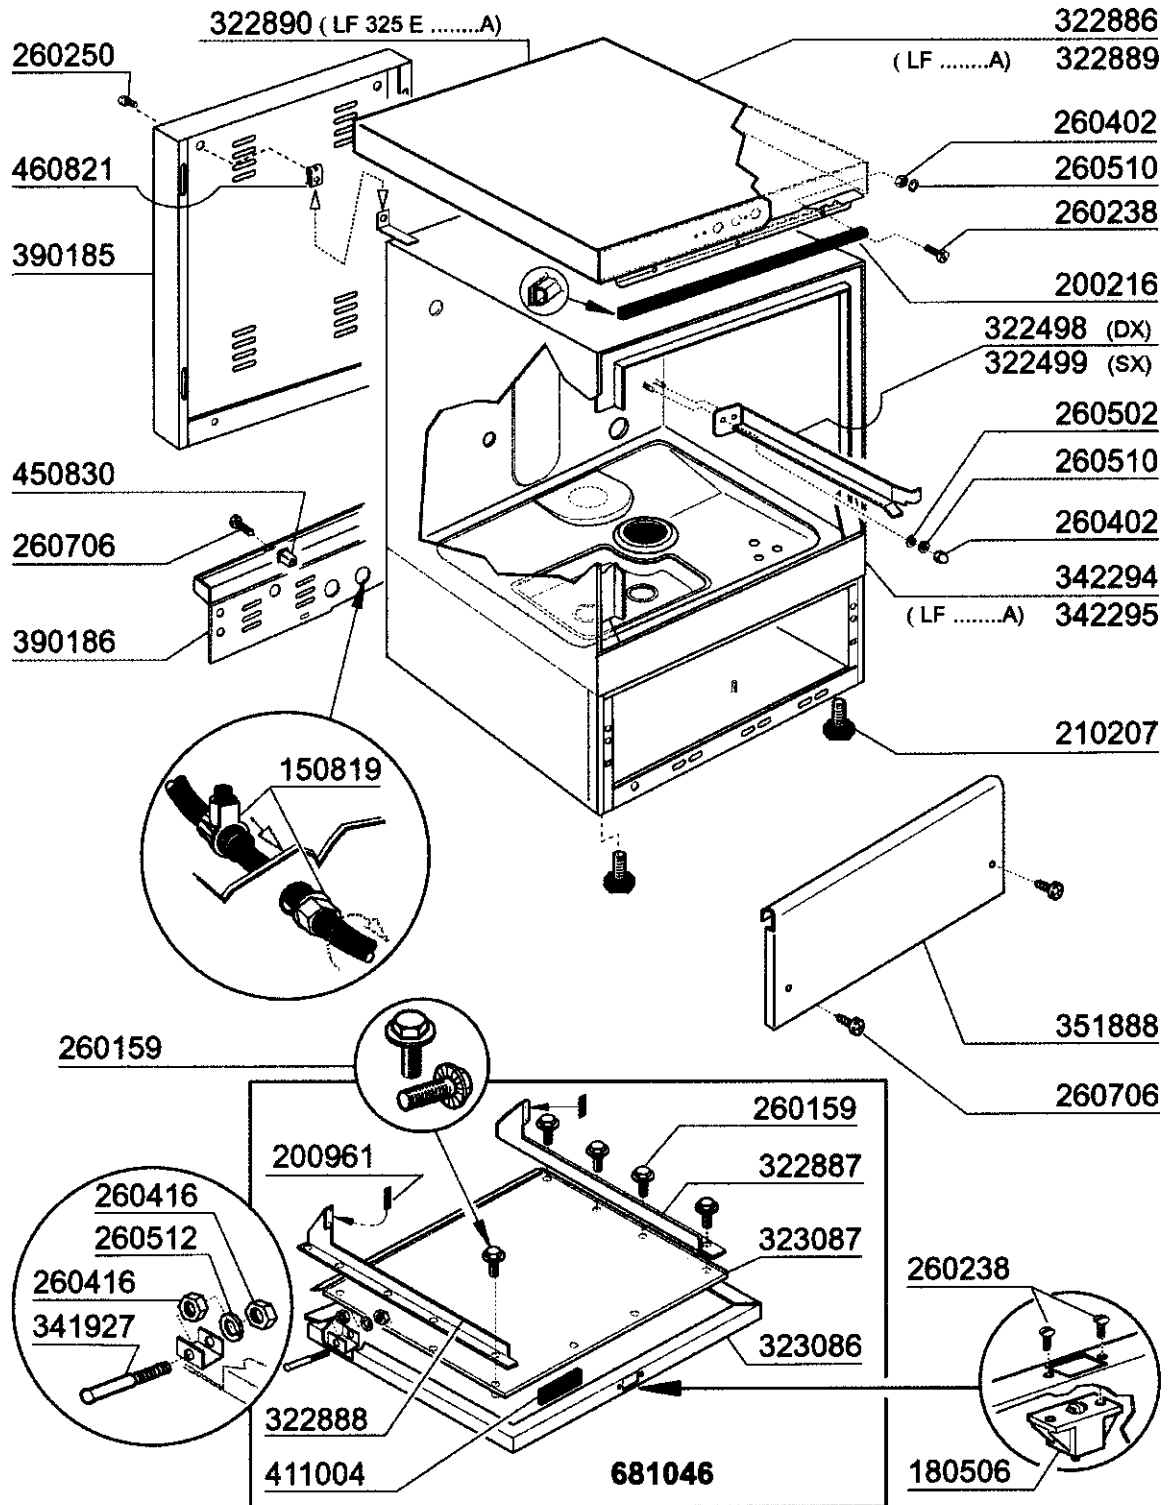

07 - 2005 | S. AG. | 01

LF324

 
Tank

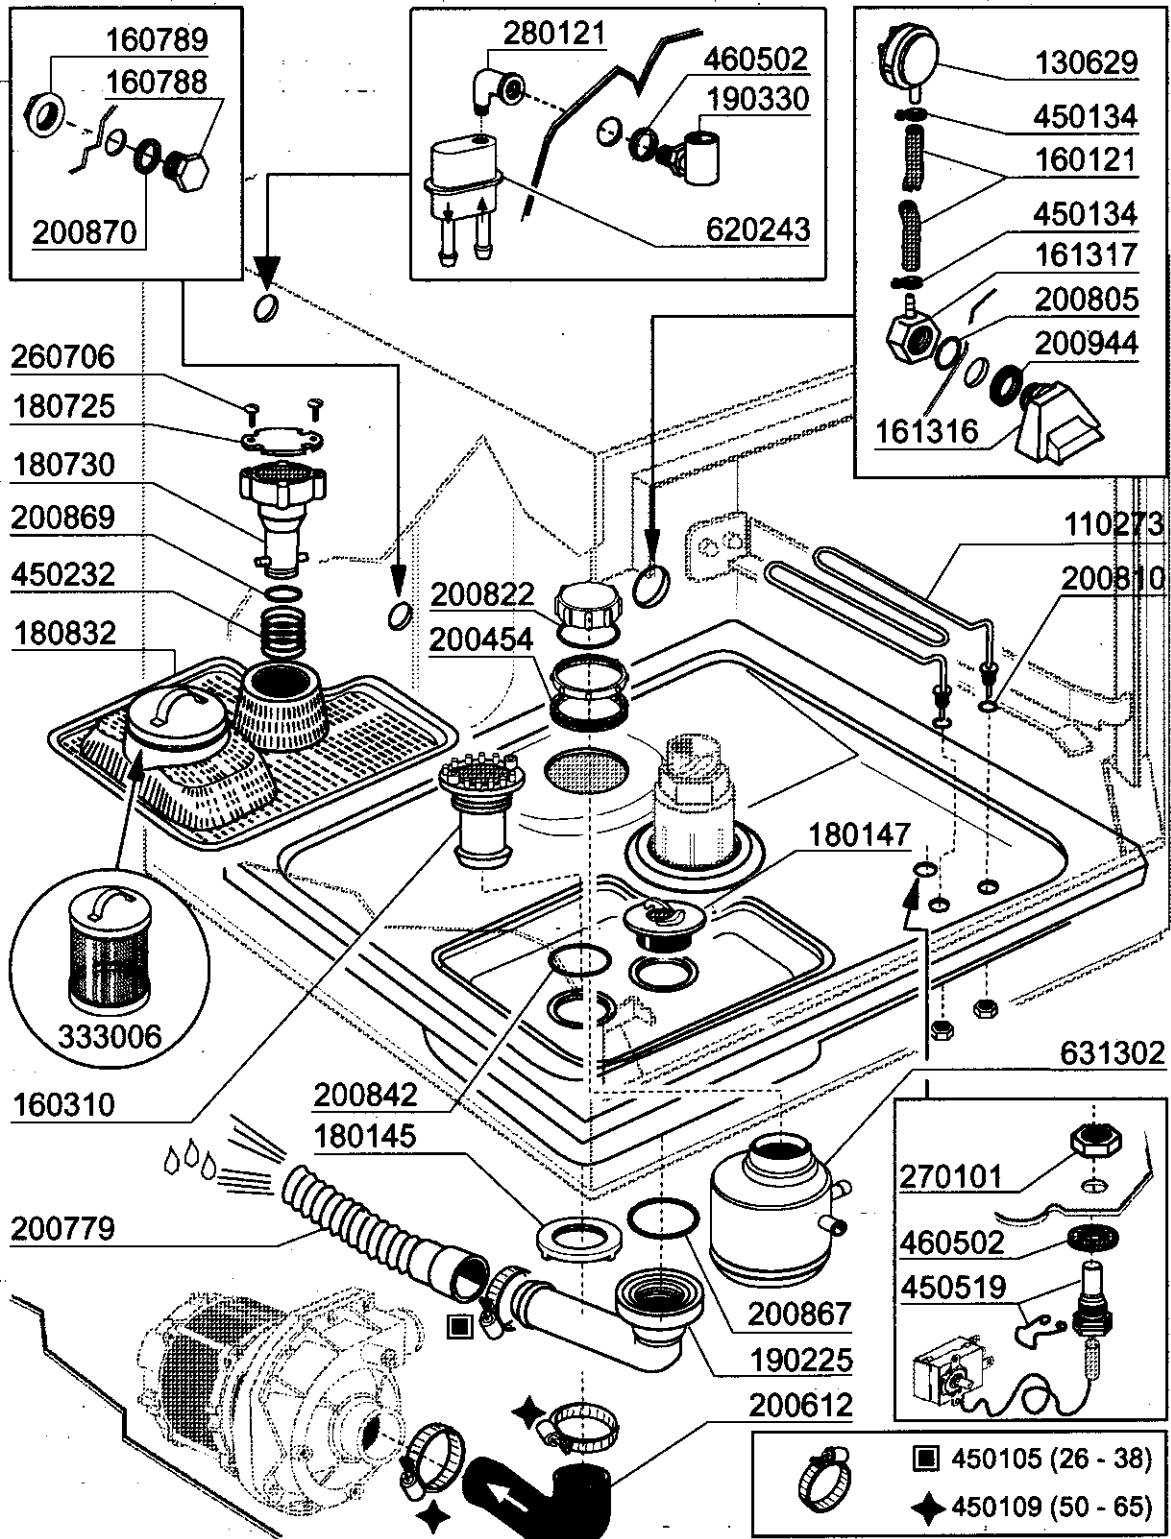

01-2005 S. AG.


LF324

 Wash arm

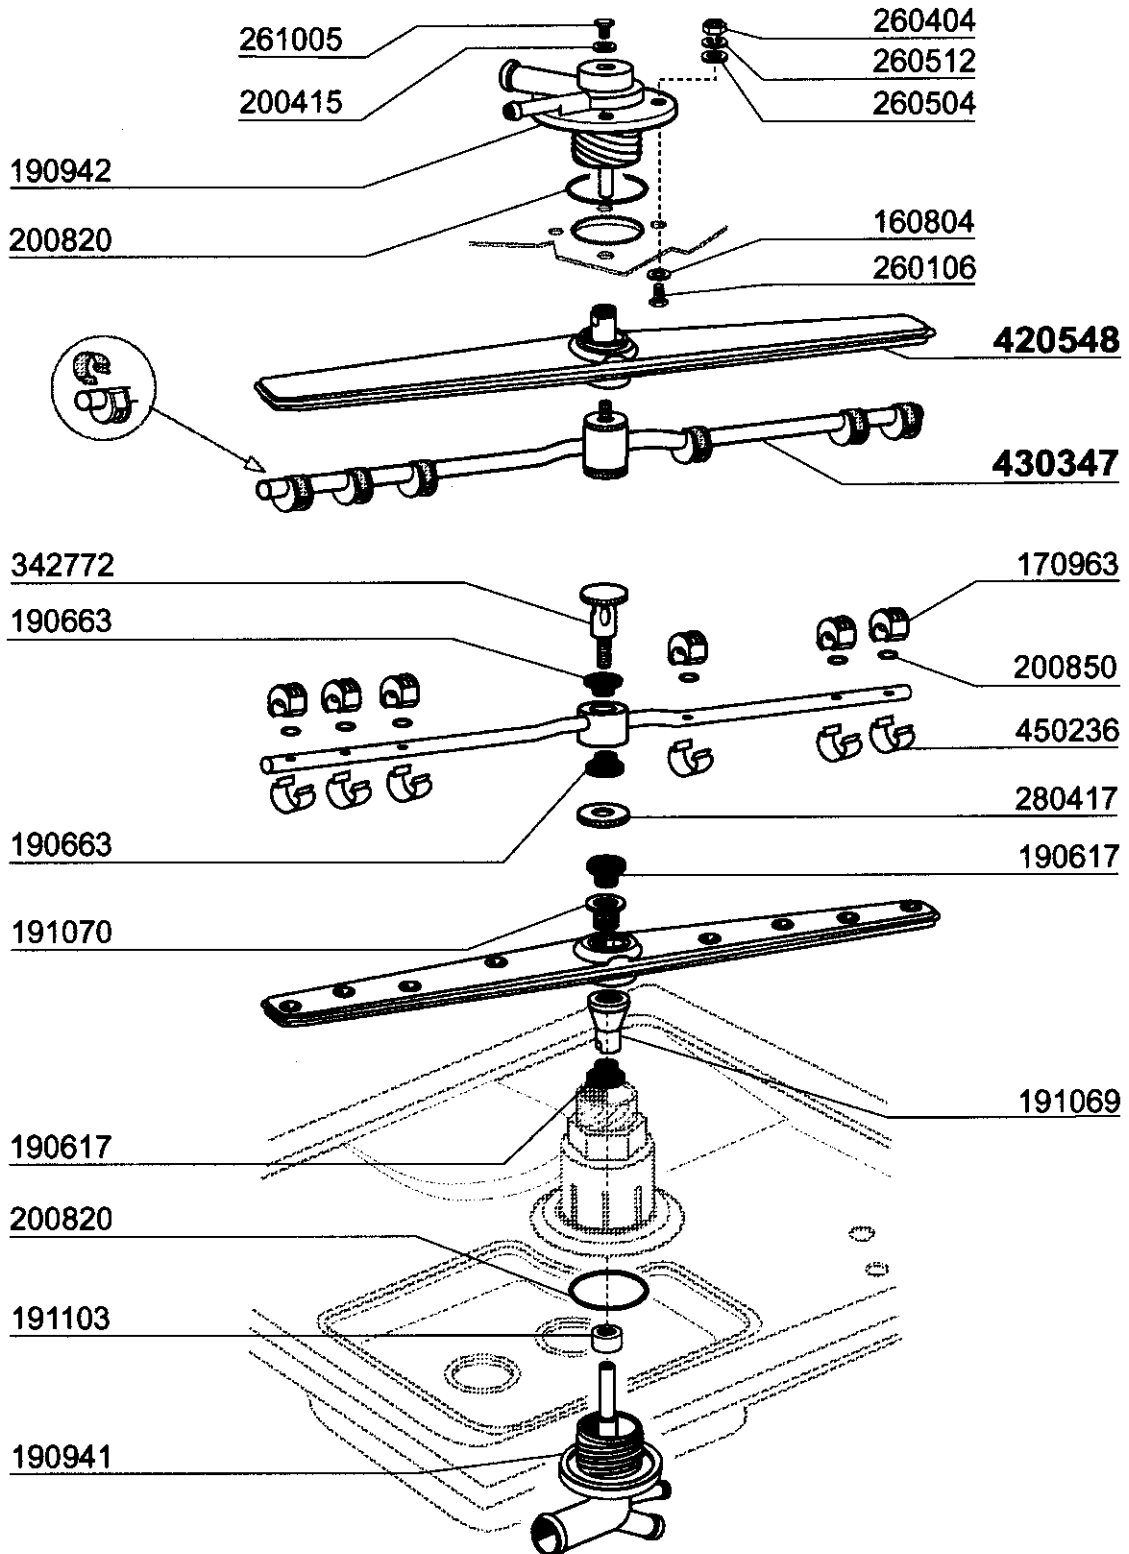


LF324

 Wash Column

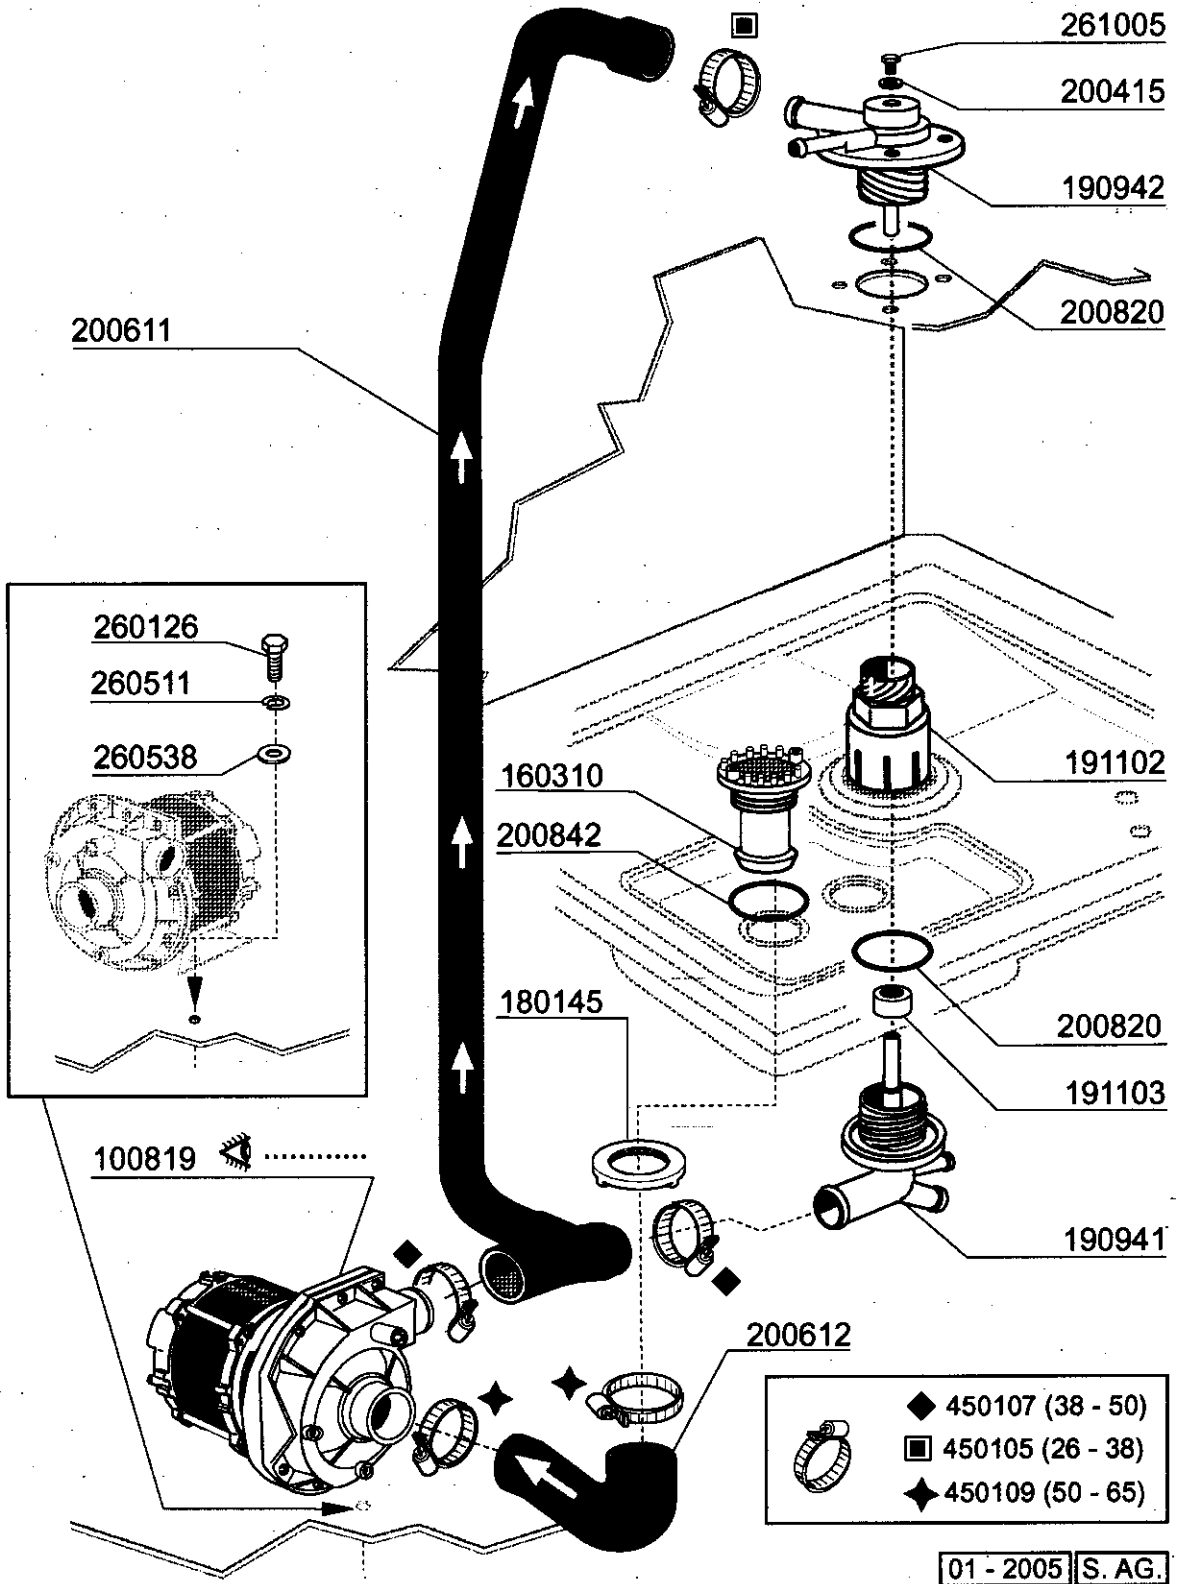



LF324

 Rinse assembly

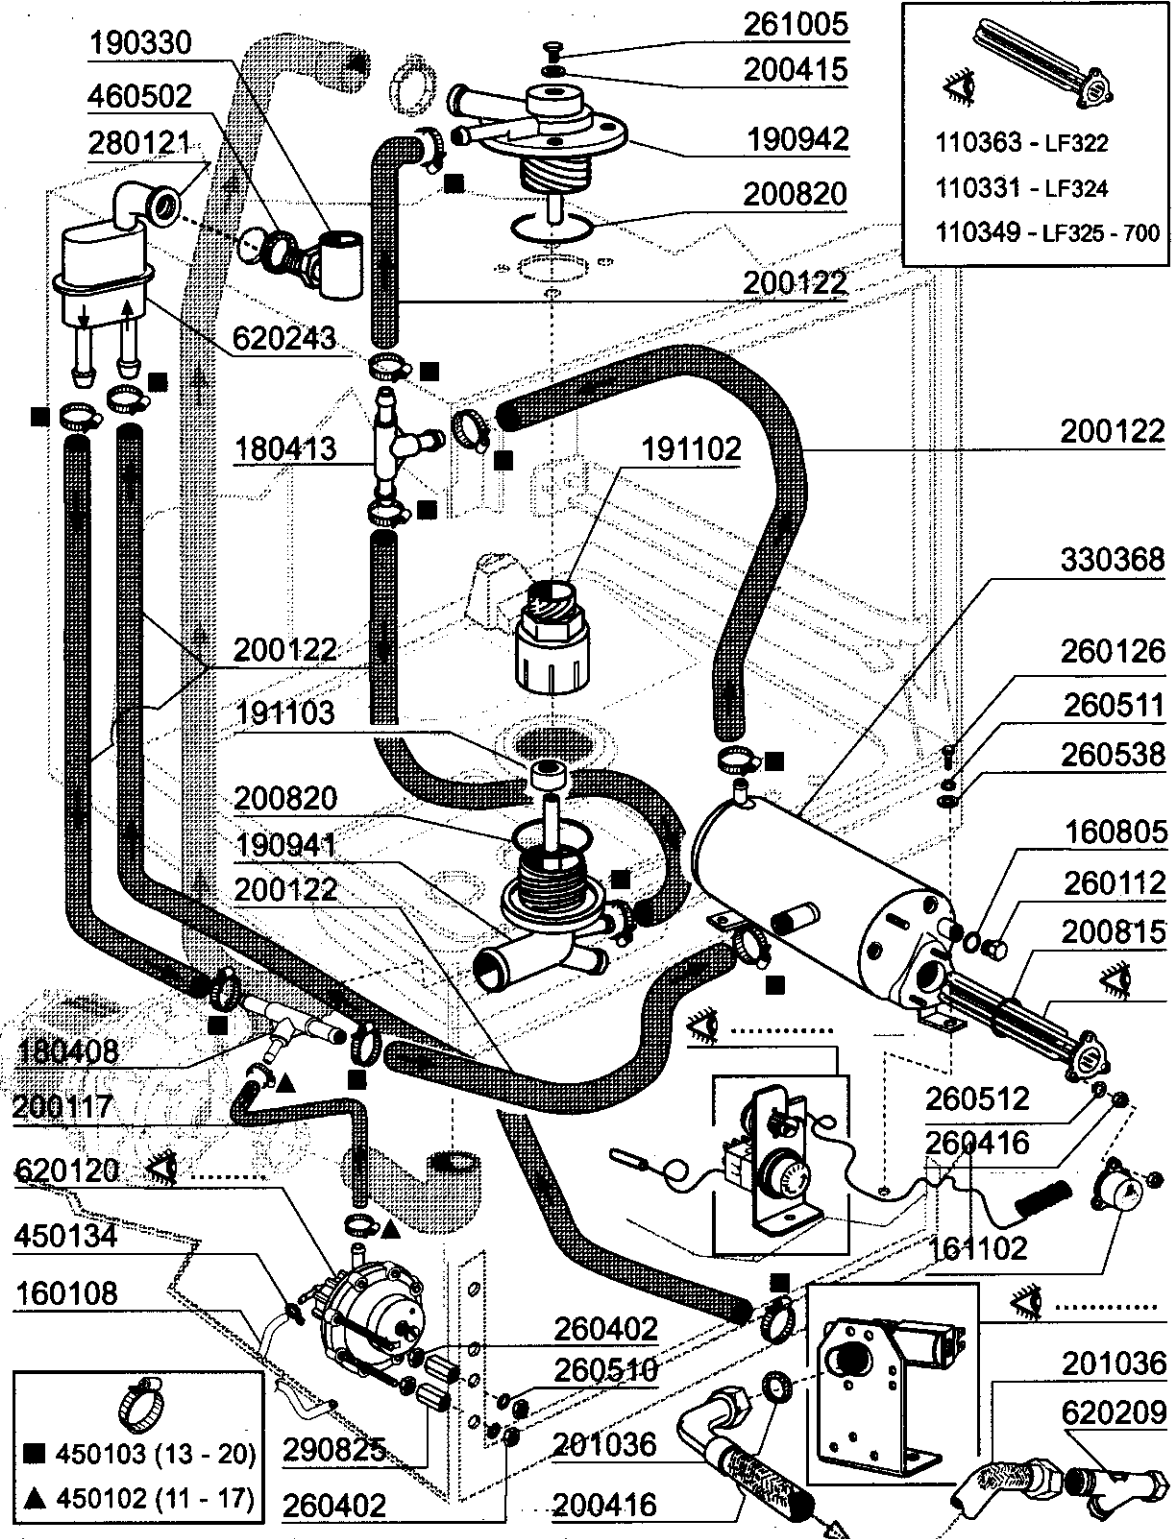

LF324

  Pump

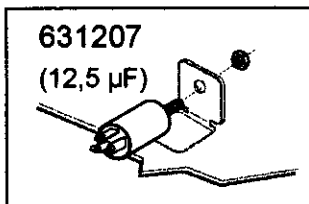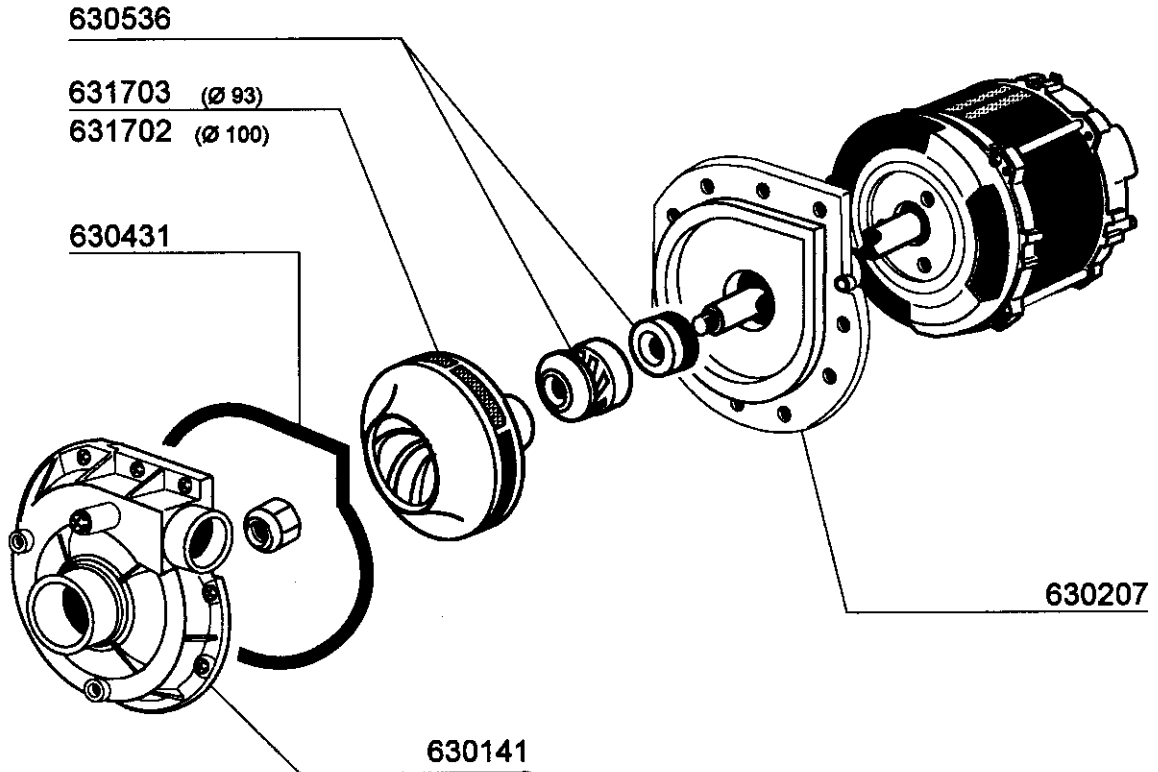


100820 (ZF 350 sx)

Tensione: 230 V

Frequenza: 50 Hz

 Potenza: Kw 0,45

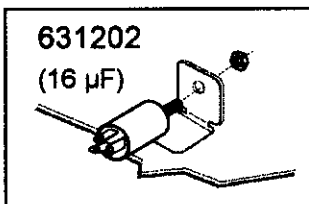

100819 (ZF 380 sx)

Tensione: 230 V

Frequenza: 50 Hz





Potenza: Kw 0,75

LF 700 - 700 A

05 - 2006 | S. AG.

LF324

   
 
Thermostat/solenoid valve group

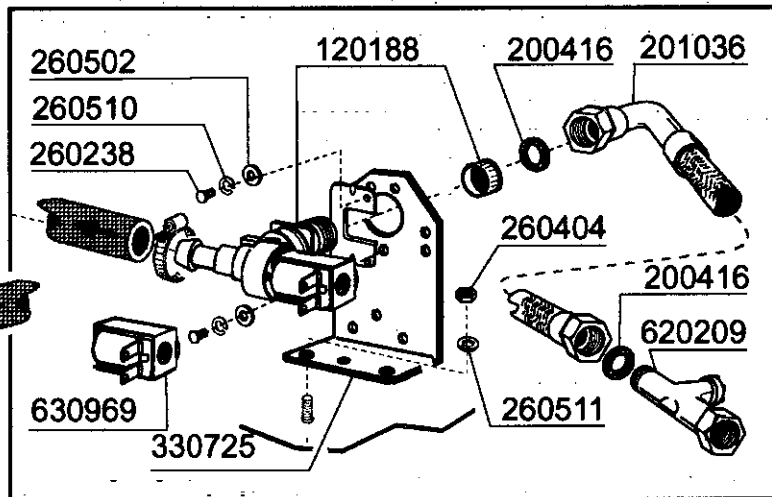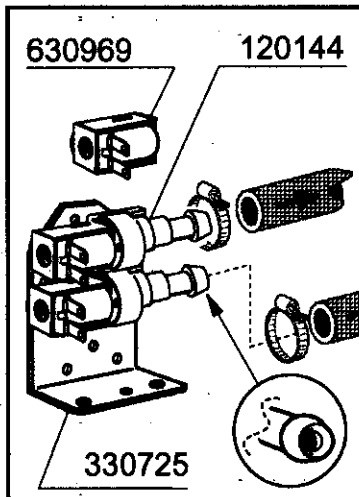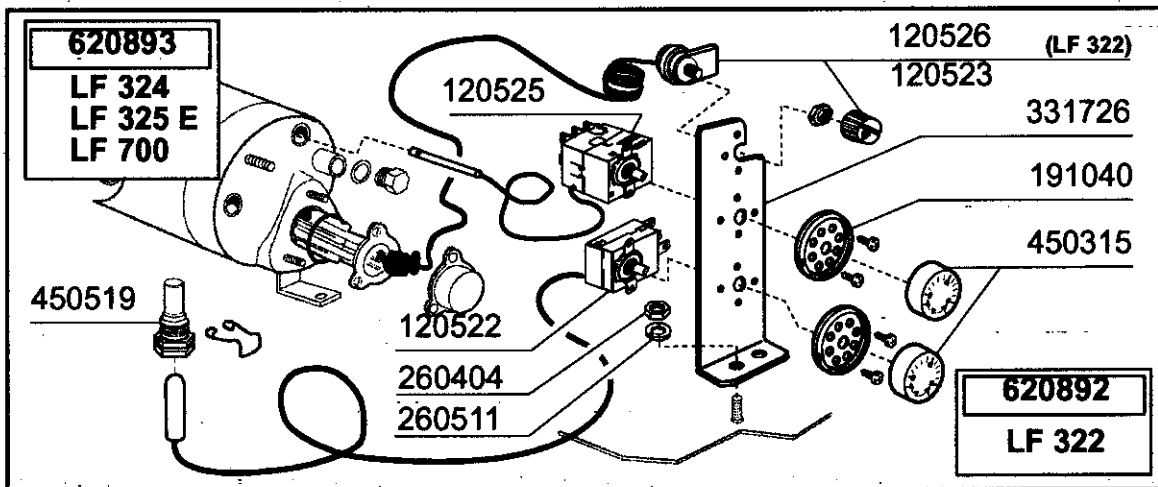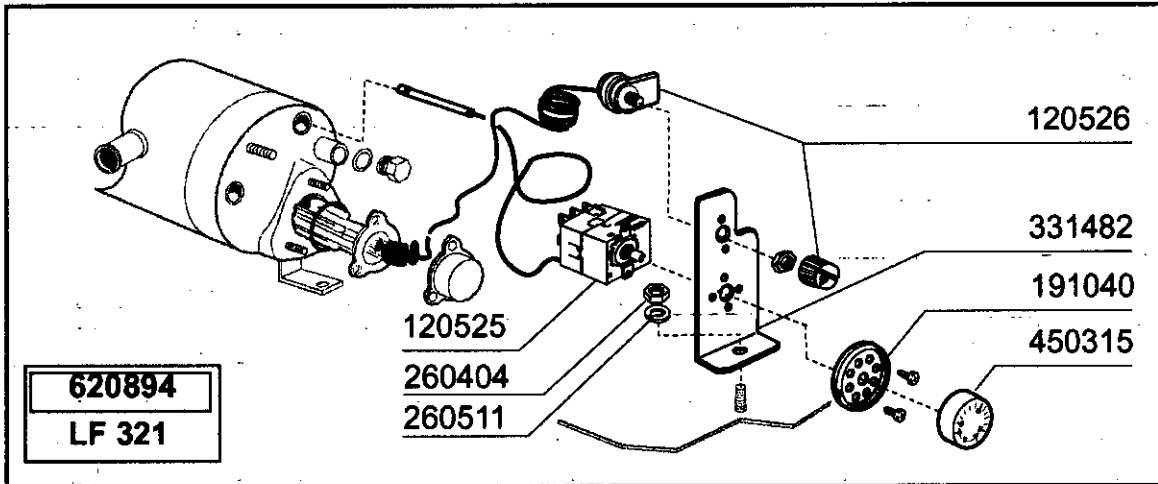

01 - 2005 | S. AG.

LF324

  
Control box

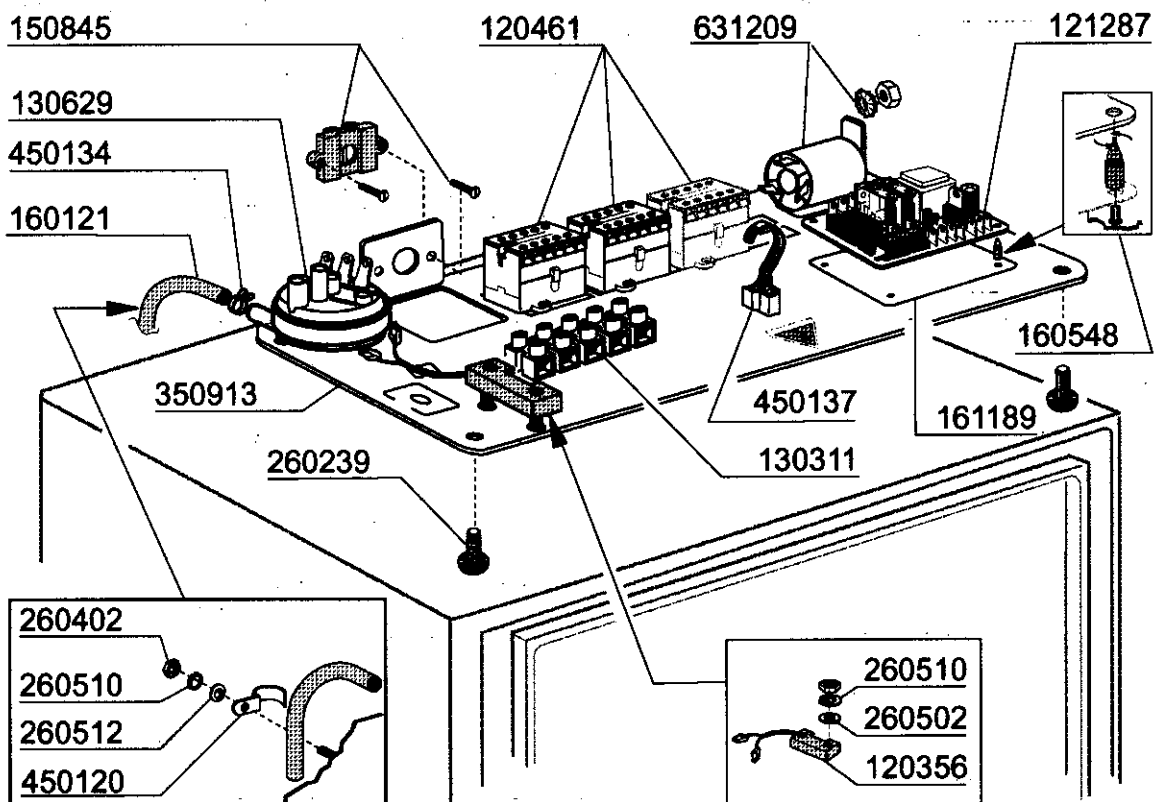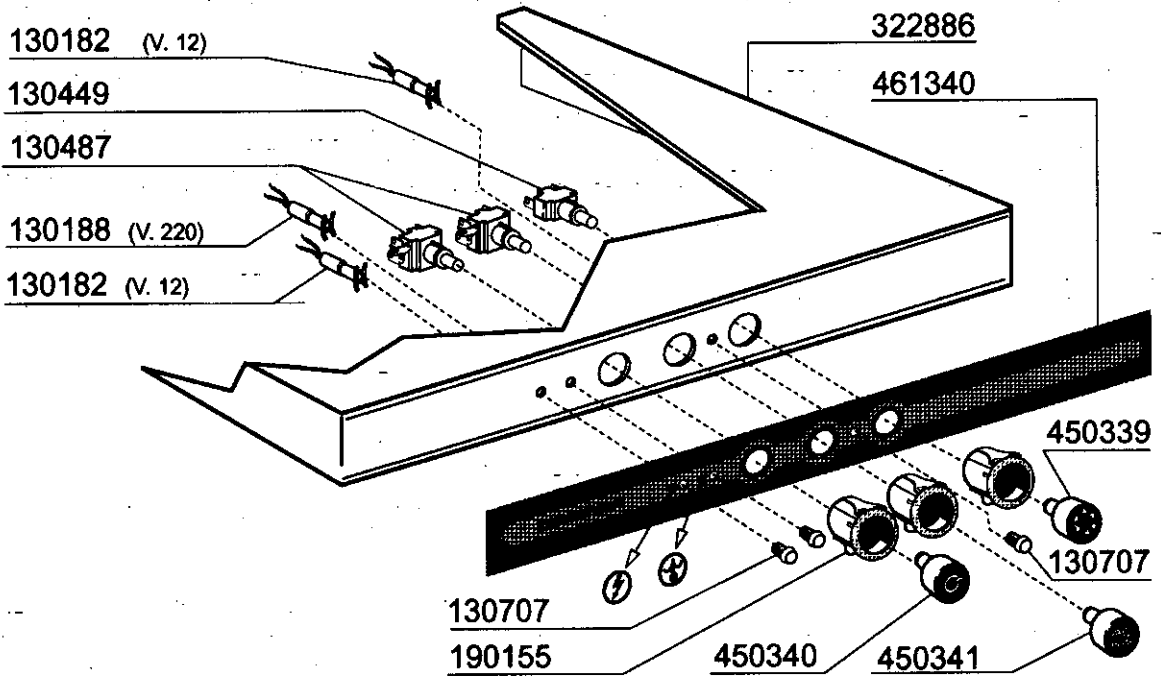

01 - 2005 | S. AG.

LF324

 
Rinse aid injector

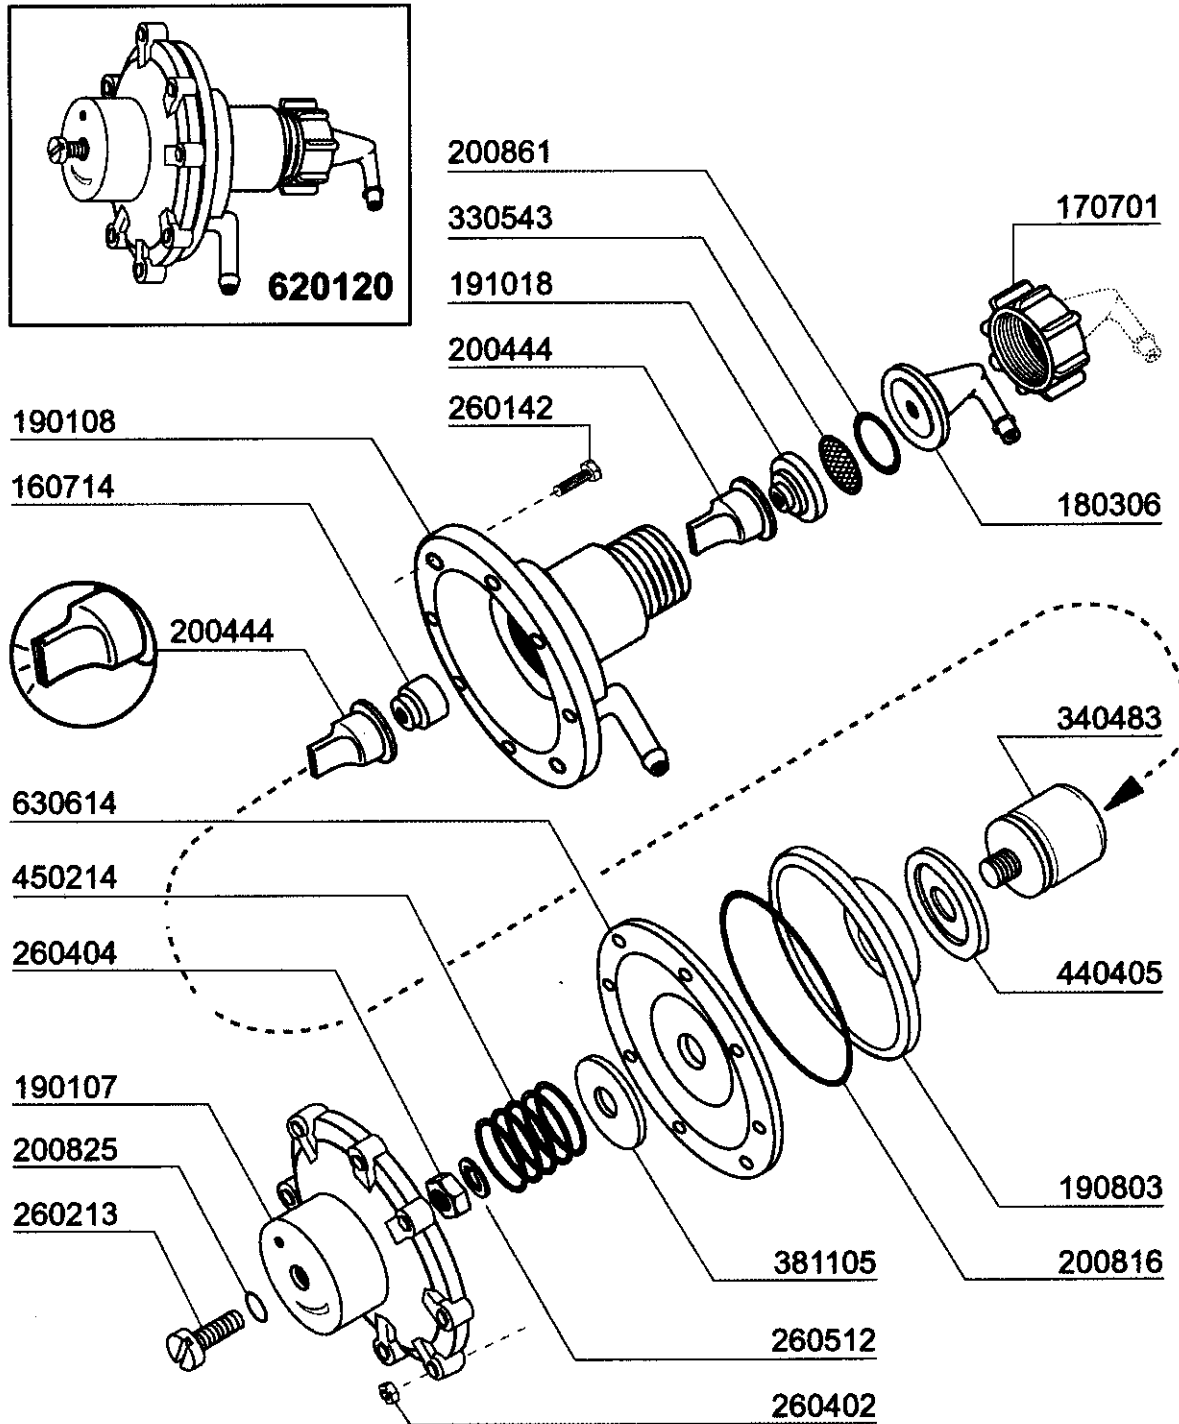

02 - 2004 | S. AG.


LF324

 Drain pump

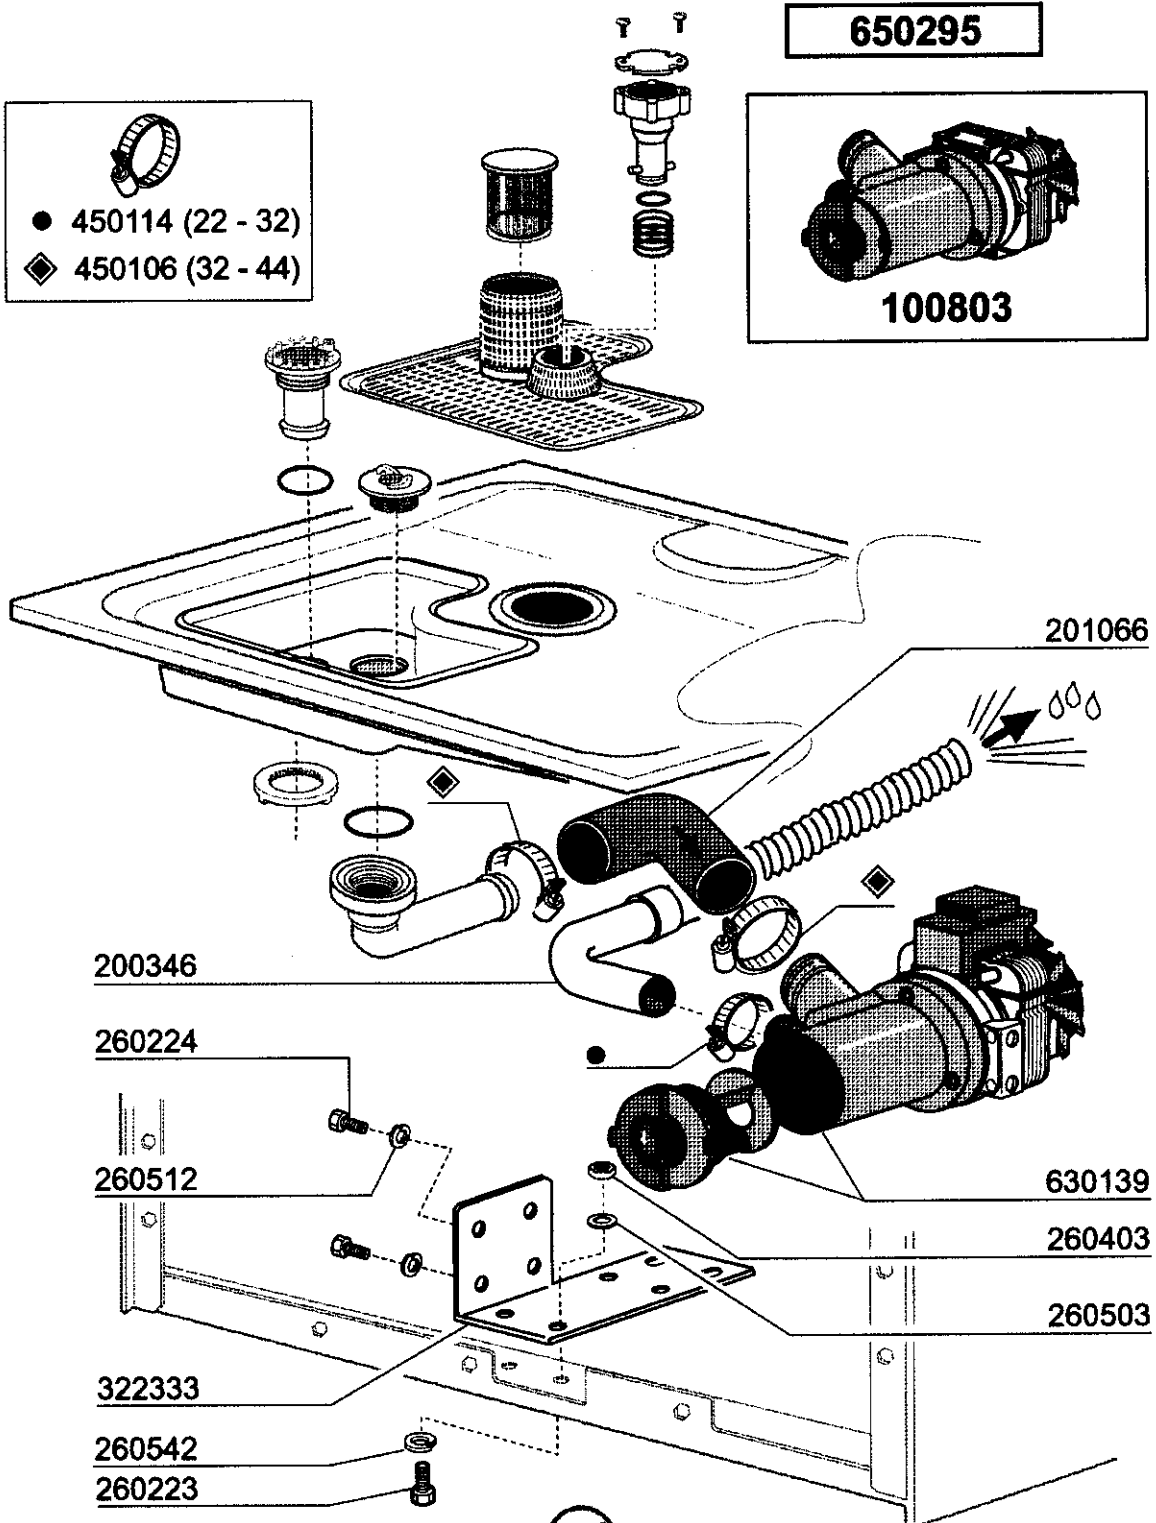

- 450114 (22 - 32)
- ◆ 450106 (32 - 44)

 650295

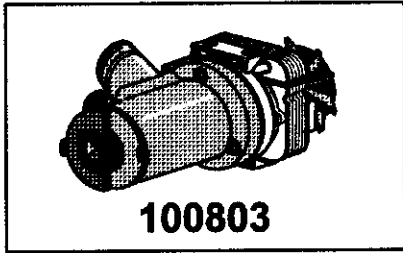

200346

260224

260512

322333

260542

260223

201066

630139

260403

260503

07-2005 | S. AG.

