







Exploded diagram and spare parts list

CE211

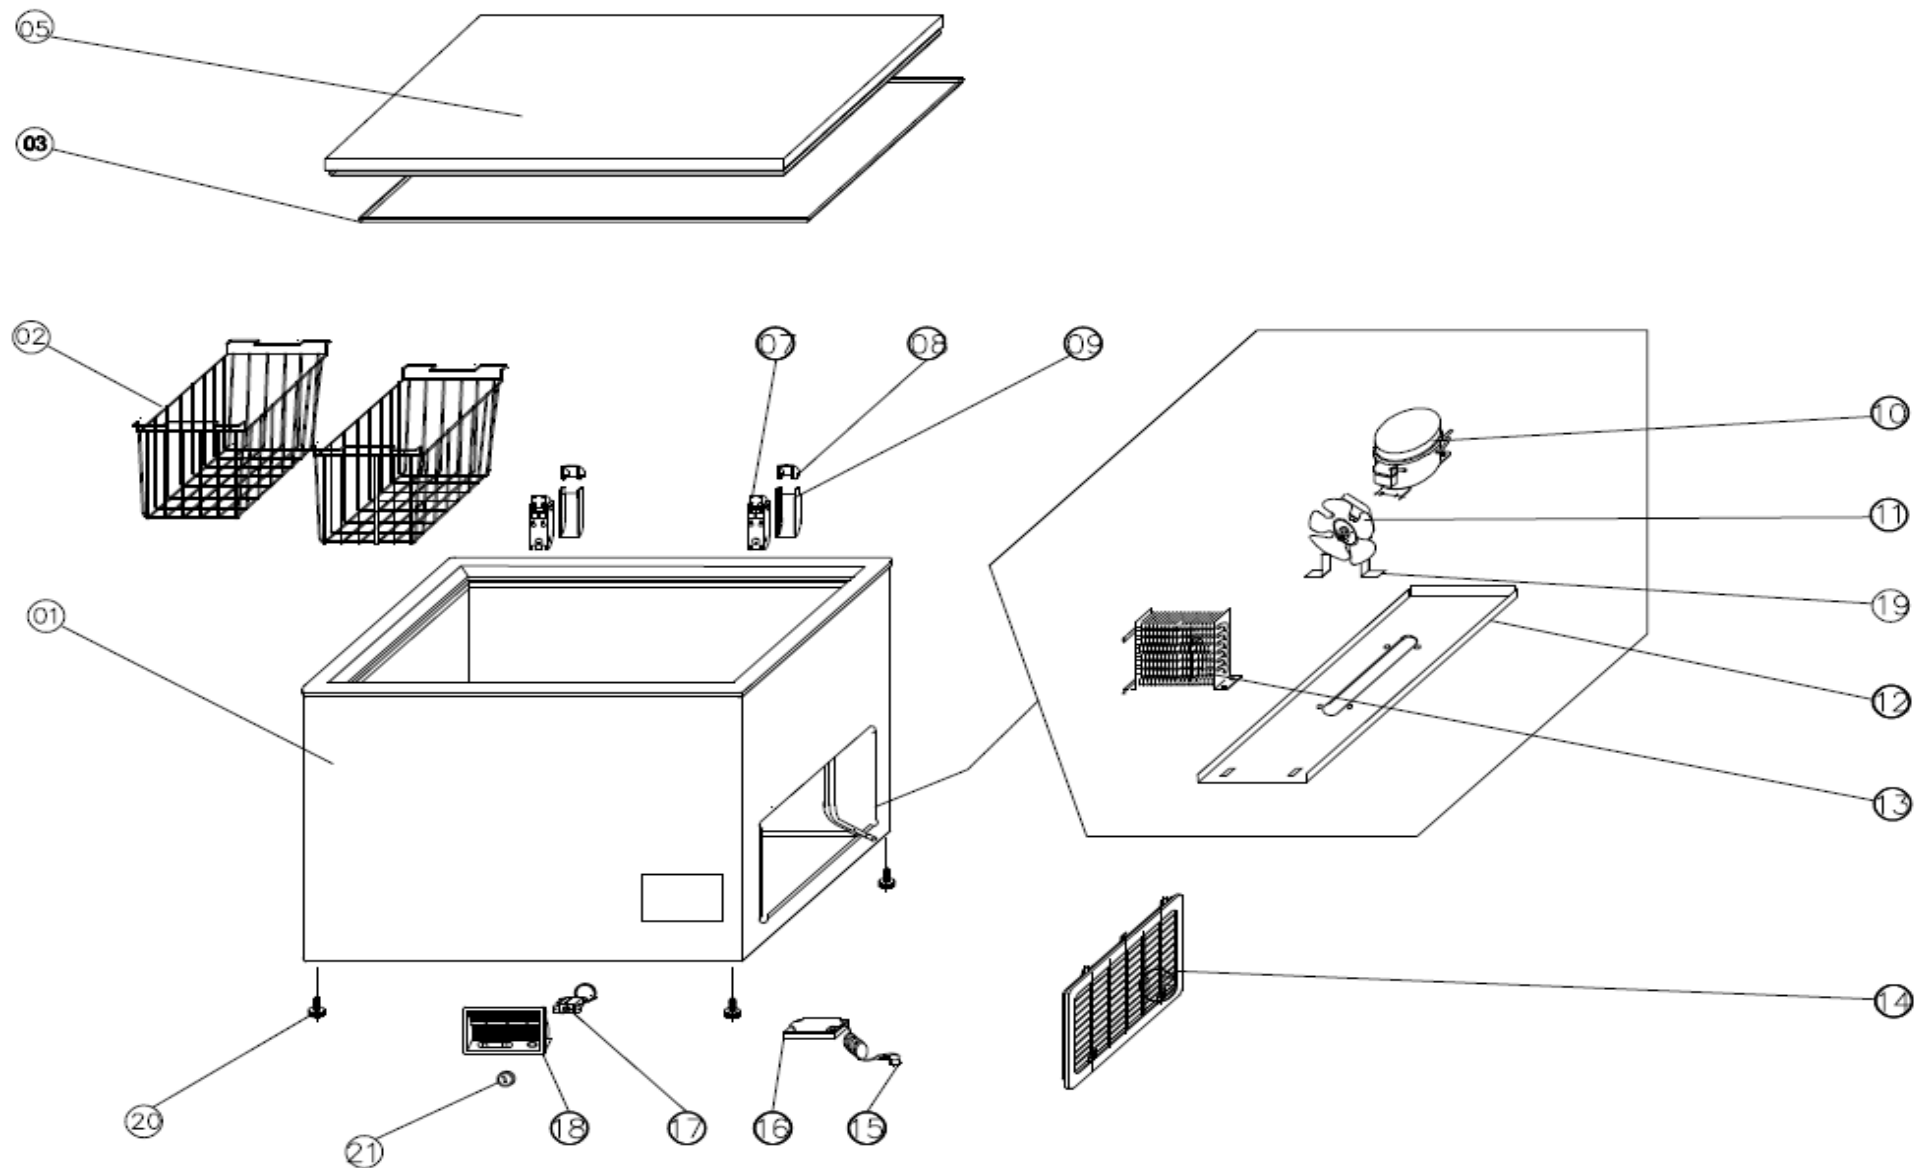

Machine	Explode	Code	Description
Polar Chest Freezers St/St Lid - 466Ltr	01		Body
Polar Chest Freezers St/St Lid - 466Ltr	02	AE770	Basket
Polar Chest Freezers St/St Lid - 466Ltr	03	AE772	Gasket
Polar Chest Freezers St/St Lid - 466Ltr	05	AE776	Lid
Polar Chest Freezers St/St Lid - 466Ltr	07	AE415	Door Hinge
Polar Chest Freezers St/St Lid - 466Ltr	08	AE416	Upper Lid Hinge Cover
Polar Chest Freezers St/St Lid - 466Ltr	09	AE417	Lower Lid Hinge Cover
Polar Chest Freezers St/St Lid - 466Ltr	10	AB111	Compressor
Polar Chest Freezers St/St Lid - 466Ltr	11	AE244	Condenser Fan
Polar Chest Freezers St/St Lid - 466Ltr	12		Unite Board
Polar Chest Freezers St/St Lid - 466Ltr	13		Condenser
Polar Chest Freezers St/St Lid - 466Ltr	14	AD199	Air Flow Grill
Polar Chest Freezers St/St Lid - 466Ltr	15		Plug
Polar Chest Freezers St/St Lid - 466Ltr	16		Junction Box
Polar Chest Freezers St/St Lid - 466Ltr	17	AD203	Controller
Polar Chest Freezers St/St Lid - 466Ltr	18	AD204	Controller Panel
Polar Chest Freezers St/St Lid - 466Ltr	19	AD206	Fan Support
Polar Chest Freezers St/St Lid - 466Ltr	20	AB866	Foot
Polar Chest Freezers St/St Lid - 466Ltr	21	AE248	Knob